

Connecting your Macintosh with a USB Data Cable



KYOCERA WIRELESS CORP.
10300 CAMPUS POINT DRIVE
SAN DIEGO, CALIFORNIA 92121 U.S.A.
Visit us at www.kyocera-wireless.com
80-B7818-3EN, Rev. 001

This manual is based on the production versions of the Kyocera Phone Desktop. Software changes may have occurred after this printing. Kyocera reserves the right to make changes in technical and product specifications without prior notice. The products and equipment described in this documentation are manufactured under license from QUALCOMM Incorporated under one or more of the following U.S. Patents:

4,901,307	5,056,109	5,099,204	5,101,501	5,103,459	5,107,225	5,109,390	5,193,094	5,228,054
5,257,283	5,265,119	5,267,261	5,267,262	5,280,472	5,283,536	5,289,527	5,307,405	5,309,474
5,337,338	5,339,046	5,341,456	5,383,219	5,392,287	5,396,516	D356,560	5,408,697	5,414,728
5,414,796	5,416,797	5,426,392	5,437,055	D361,065	5,442,322	5,442,627	5,452,473	5,461,639
5,469,115	5,469,471	5,471,497	5,475,870	5,479,475	5,483,696	5,485,486	5,487,175	5,490,165
5,497,395	5,499,280	5,504,773	5,506,865	5,509,015	5,509,035	5,511,067	5,511,073	5,513,176
5,515,177	5,517,323	5,519,761	5,528,593	5,530,928	5,533,011	5,535,239	5,539,531	5,544,196
5,544,223	5,546,459	5,548,812	5,559,881	5,559,865	5,561,618	5,564,083	5,566,000	5,566,206
5,566,357	5,568,483	5,574,773	5,574,987	D375,740	5,576,662	5,577,022	5,577,265	D375,937
5,588,043	D376,804	5,589,756	5,590,069	5,590,406	5,590,408	5,592,548	5,594,718	5,596,570
5,600,754	5,602,834	5,602,833	5,603,096	5,604,459	5,604,730	5,608,722	5,614,806	5,617,060
5,621,752	5,621,784	5,621,853	5,625,876	5,627,857	5,629,955	5,629,975	5,638,412	5,640,414
5,642,398	5,644,591	5,644,596	5,646,991	5,652,814	5,654,979	5,655,220	5,657,420	5,659,569
5,663,807	5,666,122	5,673,259	5,675,581	5,675,644	5,680,395	5,687,229	D386,186	5,689,557
5,691,974	5,692,006	5,696,468	5,697,055	5,703,902	5,704,001	5,708,448	5,710,521	5,710,758
5,710,768	5,710,784	5,715,236	5,715,526	5,722,044	5,722,053	5,722,061	5,722,063	5,724,385
5,727,123	5,729,540	5,732,134	5,732,341	5,734,716	5,737,687	5,737,708	5,742,734	D393,856
5,748,104	5,751,725	5,751,761	5,751,901	5,754,533	5,754,542	5,754,733	5,757,767	5,757,858
5,758,266	5,761,204	5,764,687	5,774,496	5,777,990	5,778,024	5,778,338	5,781,543	5,781,856
5,781,867	5,784,406	5,784,532	5,790,589	5,790,632	5,793,338	D397,110	5,799,005	5,799,254
5,802,105	5,805,648	5,805,843	5,812,036	5,812,094	5,812,097	5,812,538	5,812,607	5,812,651
5,812,938	5,818,871	5,822,318	5,825,253	5,828,348	5,828,661	5,835,065	5,835,847	5,839,052
5,841,806	5,842,124	5,844,784	5,844,885	5,844,899	5,844,985	5,848,063	5,848,099	5,850,612
5,852,421	5,854,565	5,854,786	5,857,147	5,859,612	5,859,838	5,859,840	5,861,844	5,862,471
5,862,474	5,864,760	5,864,763	5,867,527	5,867,763	5,870,427	5,870,431	5,870,674	5,872,481
5,872,774	5,872,775	5,872,823	5,877,942	5,878,036	5,870,631	5,881,053	5,881,368	5,884,157
5,884,193	5,884,196	5,892,178	5,892,758	5,892,774	5,892,816	5,892,916	5,893,035	D407,701
5,898,920	5,903,554	5,903,862	D409,561	5,907,167	5,909,434	5,910,752	5,911,128	5,912,882
D410,893	5,914,950	5,915,235	5,917,708	5,917,811	5,917,812	5,917,837	5,920,284	5,920,834
D411,823	5,923,650	5,923,705	5,926,143	5,926,470	5,926,500	5,926,786	5,926,786	5,930,230
5,930,692	Other patents pending.							

FCC/IC Notice

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and user's authority to operate the equipment.

Warning

Use only Kyocera Wireless Corp. approved accessories with Kyocera Wireless Corp. phones. Use of any unauthorized accessories may be dangerous and will invalidate the phone warranty if the unauthorized accessories cause damage or defect to the phone.



© 2002 Kyocera Wireless Corp. All rights reserved.

Kyocera is a registered trademark of Kyocera Corporation. Mac and Apple Remote Access are registered trademarks of Apple Computer, Inc. All other trademarks are the property of their respective owners.

Printed in the United States of America.

80-B7818-3EN, Rev. 001

CONNECTING YOUR MACINTOSH WITH A USB DATA CABLE

The USB version of your Kyocera data cable kit can be used to connect your phone to your Macintosh® for use as a wireless modem. You can also use your USB data cable to charge your Kyocera smartphone and to synchronize your data.

To install software

Ensure that the Kyocera USB data cable is disconnected before installing the drivers.

Note: If you connect the cable before installing the software, your Mac automatically detects the new hardware. The following message is displayed: **Software needed for the USB device "KWC USB to Phone Cable" is not available. Would you like to look for the software on the Internet?** Select **Cancel** and follow the steps below to install the software.

1. Insert the CD into your computer's CD-ROM drive and double-click on **Install USB Drivers**.
2. Read the licensing agreement and click **Accept** to install the drivers.
3. Follow the instructions to complete the installation and restart your computer. The necessary drivers to use the Kyocera USB data cable and two modem scripts will be automatically installed.

Note: The modem scripts allow you to choose from the following modems when setting up your communications software, such as Apple Remote Access (ARA): Kyocera CDMA Wireless Modem 1.2 or Kyocera CDMA High Speed Wireless Modem 1.0. If you are connecting using a Kyocera 2235, 2255, 2325, or 2345 phone, select the Kyocera CDMA High Speed Wireless Modem.

4. Connect your USB data cable from your phone to your computer.

To view and change modem settings

1. There are several ways to reach your modem preferences. Two are listed below.
 - Select **Apple** → **Control Panel** → **Remote Access**
 - or
 - Select **Apple** → **Control Panel** → **Modem**
2. Connect via: Kyocera CDMA Wireless Modem 1.2 (or Kyocera CDMA High Speed Wireless Modem 1.0 if you are using a Kyocera 2235, 2255, 2325, or 2345 phone).
3. Make sure **Ignore Dial Tone** is unchecked.
4. You will be prompted to provide a name, password, and number.

Where to go for help

If you need further assistance, you may contact the Kyocera Wireless Corp. Customer Care Center in any of the following ways:

- Web site: **www.kyocera-wireless.com**
- Email: phone-help@kyocera-wireless.com
- Phone: (800) 349-4478 (U.S.A. and Canada) or (858) 882-1401
- Kyocera Wireless Corp., 10300 Campus Point Drive, San Diego, CA 92121 U.S.A