



user guide



Wireless Portable Speaker with Headset

FCC Notice:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and users' authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

To comply with the FCC RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada Notice

Operation is subject to the following two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications of the RSS210.

Kyocera is a registered trademark of Kyocera Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Wireless Corp. is under license. All other marks are held by their respective owners. Copyright © 2007 Kyocera Wireless Corp. All rights reserved.

CONTENTS

Introduction	1
Charging the battery	3
The Wireless Portable Speaker with Headset can be charged three different ways:	4
Charging the headset using the speaker base.	4
Multi-function button	5
Turning the device on and off	5
Volume adjustment	5
Pairing	5
Connecting	6
Placement of the device in the car	7
Making a call	7
Answering a call	8
Ending a call	8
Mute	8
Rejecting an incoming call	8
Call transfer	9
Switching from speaker to headset	9
Three-way calling	9
Important information	9

WIRELESS PORTABLE SPEAKER WITH HEADSET

Introduction


Congratulations on your purchase of the Wireless Portable Speaker with Headset featuring Bluetooth® wireless technology. The headset is comfortable to wear and easy to use.

Bluetooth wireless technology

Bluetooth wireless technology is a short-distance wireless communication technology. The range of operation between Bluetooth wireless technology devices is about 10M (33 ft.). Bluetooth wireless technology does not require line of sight and can transmit through walls and other non-metal obstacles. Thick or reinforced concrete can limit the range.

The Wireless Portable Speaker with Headset complies with Bluetooth wireless technology version 1.2 and supports both the Headset Profile and Hands-free Profile. The Wireless Portable Speaker with Headset has an innovative structural and functional design that allows it to be used as either a car kit/speaker or a headset according to the user's needs.


Package contents

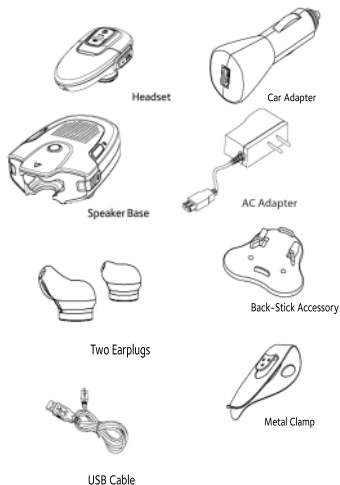





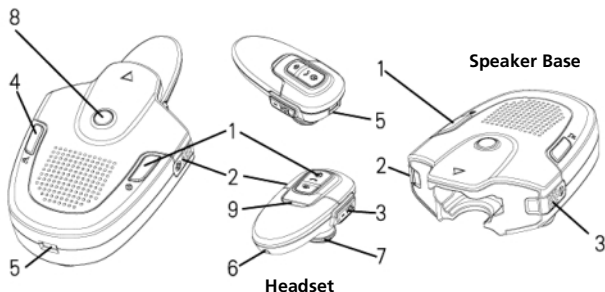


Note: Please refer to actual product. The above pictures are only for your reference.

Getting to know your Wireless Portable Speaker with Headset

 
Refer to the following illustration to identify the parts



<p>1 Multi Function turns the wireless portable speaker and/or headset on/off, answers calls, ends calls. Its functionality depends on how long you keep the button pressed: A short press is less than one second A long press is two to five seconds</p>	 	
<p>2 Volume + increase</p>		
<p>3 Volume - decrease</p>		
<p>4 Mute the microphone during conversation, and the other side won't hear your voice</p>		
<p>5 Charging jack for AC adapter</p>		
<p>6 Microphone transfers sound into electronic signal</p>		
<p>7 Receiver transfers electronic signal into sound</p>		
<p>8 Charging indicator indicates charging status</p>		
<p>9 Working indicator indicates working status</p>		

Charging the battery

Your Wireless Portable Speaker with Headset needs to be charged before initial use and recharged when the red light blinks at intervals when you power it on.

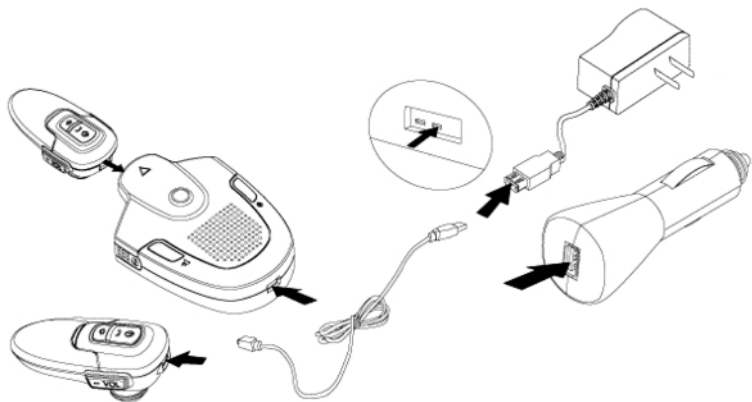

Important: The rechargeable battery in the Wireless Portable Speaker with Headset must be disposed or recycled according to local ordinance regulations.

The Wireless Portable Speaker with Headset can be charged three different ways:

Charging with the home power adapter

1. Connect the USB cable to the AC Adapter.
2. Insert the other end of the USB cable into the speaker's power jack.
3. Plug the AC Adapter into an appropriate electrical outlet (or power socket).
4. The charging indicator will light up, indicating that the Wireless Portable Speaker with Headset is connected to a power source, and is charging.
5. When charging is completed, the indicator light will turn off.
6. Remove the AC Adaptor from the outlet.

Charging with your PC

1. Connect one end of the USB cable to your PC or any other equipment supplying USB power.
2. Insert the other end of the USB cable into the speaker's power jack. The charging indicator will light up, indicating that the Wireless Portable Speaker with Headset is connected to a power source.
3. When charging is completed, the indicator light will turn off. Remove the USB cable from the PC, or other equipment.

Charging with the car adapter

1. Connect the car adapter to one end of the USB cable.
2. Insert another end of the USB cable into the speaker's power jack.
3. Plug the car adapter into the 12 volt power source jack. The charging indicator will light up, indicating that the Wireless Portable Speaker with Headset is connected to a power source.
4. When charging is completed, the red light will turn off.
5. Remove the car charger from the 12 volt power source jack.

Charging the headset using the speaker base

Note: The speaker base must first be charged for at least 5 minutes. (Charging for the entire unit may take up to 4 hours).

1. Insert the headset into the speaker base. The indicator on the headset will light up (indicating that it is charging).
2. When charging is completed, the red light will light will turn off.
3. Remove the headset from the speaker base. It is now ready for use.

Note: You can use your headset while it is charging.

Battery use and standby times

Headset

Standby time is up to 100 hours.

Talk time is up to 4 hours.

Charging time is around 2.5 hours.

Whole unit (headset & speaker base)


Standby time is up to 200 hours.

Talk time is up to 6 hours.

Charging time is around 4 hours

Note: If the headset and speaker base both need to be recharged, charge the base for five minutes prior to charging both.


Multi-function button

The function of  depends on how long you keep the button pressed.

- A **short-press** is **less than one second**
- A **long-press** is **two to five seconds**


Turning the device on and off

Turn on

Long press  until blue light blinks and the Wireless Portable Speaker beeps once, then release the button. The power is on.



The mobile device will ask if you would like to connect to the Wireless Portable Speaker with Headset. Confirm the connection.



Turn off

Long press  until red light blinks quickly, and the device beeps once, then release the button. The power is off.



The mobile device will disconnect from the Wireless Portable Speaker with Headset.

Volume adjustment

During a call, you can adjust the volume using  and/or .

1. Press  to increase volume.
2. Press  to decrease volume.

Notes:

- There will be a low, short sound each time you press  or ; the volume of this tone will increase or decrease as you press the buttons.
- Please set your speaker to a suitable volume between maximum and minimum.
- You can also use the volume buttons of your mobile phone to adjust the volume of the speaker.



Pairing



Pairing is the process of linking the Wireless Portable Speaker with Headset with your Bluetooth wireless technology enabled mobile phone.

Before you use the speaker with your mobile phone, the devices must be paired.

After pairing is complete, the speaker can only be used with the mobile phone with which it was paired. If you wish to use the speaker with a different mobile phone, you must repeat the pairing process with the new mobile phone. When you do this, the speaker will no longer work with the previous mobile phone.

Begin the pairing procedure with the speaker powered off.

1. Press   for 5 seconds until the speaker beeps twice and the red and blue lights blink alternately. This indicates that your speaker is in pairing status.

Note: You will find that the blue light will blink first before the red and blue lights blink alternately, which indicates the power is on. Make sure to continue pressing   until the lights are blinking alternately and the speaker beeps three times.

2. Execute the search function on your mobile phone to search for the Bluetooth wireless technology device. The search may take several seconds
3. After the search process has been completed successfully, the mobile phone screen will display the name(s) of the device(s) found.
4. Select **GCK800** and acknowledge that you would like to pair the device.
5. You will be requested to enter a password, passkey, or identification code. Enter "0000", and then confirm. Now, your mobile phone starts pairing with the speaker.
6. When pairing has been successfully completed, only the blue light blinks, instead of the red and blue that were previously blinking

Notes:

- Confirm that your Wireless Portable Speaker with Headset is in pairing status before pairing, otherwise your mobile phone will not find it.
- If pairing is unsuccessful after about one minute, the speaker will automatically revert to standby mode.

- Pairing guarantees secure communication. The Identification Code exchange will assure that there is an exclusive connection between your mobile phone and the speaker.
- Once your mobile phone and speaker have been paired, you will not need to pair it again unless you remove it from your mobile phone.

Connecting

Once you have successfully paired your mobile phone with the GCK800, you will need to connect the two devices in order to use them together. The mobile phone will ask if you would like to connect the device.





On the mobile phone, confirm that you want to connect to the device.

You are now ready to use the speaker.

Disconnecting

The speaker will automatically disconnect from your mobile phone if you are too far from the mobile phone or if you power off either device.

Reconnecting

If your speaker is disconnected from your mobile phone, simply press and hold the  , or   until the mobile phone acknowledges it. Your mobile phone will ask if you would like to connect to the speaker. Answer **Yes** to connect.

Placement of the device in the car

To maximize users' operating flexibility, the Wireless Portable Speaker with Headset has been designed to be located inside a car in a number of ways. Two placement suggestions are:

- Insert the Wireless Portable Speaker with Headset into the metal clamp and clip onto the sun visor.



Metal Clamp

- or -

- Peel the paper from the back of the Wireless Portable Speaker with Headset's "Back-Stick Accessory" and stick it onto a smooth, flat surface in the car.



Back-Stick Accessory

Notes:

- Place the Wireless Portable Speaker with Headset in a position that will not block the driver's sight or interfere with safe vehicle operation.
- The user should ensure the position of the Wireless Portable Speaker with Headset inside a car complies with international, state, and local regulations.



- Ensure the position of the Wireless Portable Speaker with Headset won't interfere with any safety equipment in a car, such as an air bag.
- The Wireless Portable Speaker with Headset should be placed in a safe position where it will not dislodge and harm the passengers when the auto encounters bumps, collisions, or other accidents while driving.

Making a call

Make sure your the speaker is connected to your mobile phone before you make a call. The speaker can support "voice dialing" function if your mobile phone has this function. For details on voice-dialing, please refer to your mobile phone's user manual.

Voice dialing

Note: The phone must support hands-free and voice recognition functions and voice dial must already be set up for this number.


1. Press  for approximately two seconds. The mobile phone asks you to say a name.
2. Press  to cancel during voice dialing. The phone beeps and ends the call.



Note: It is a good idea to use your speaker to record your dialing voice.

Dial with mobile phone keypad

Dial numbers in the normal way. You may need to transfer the call from your phone to the headset. Otherwise, you will hear through the speaker when the call is connected.


 




Re-dial the last dialed number

- In standby mode, press  for two to five seconds until the speaker beeps.

 
 


Note: Your mobile phone's model and settings determine whether there is a keypad tone or not. Adjust the volume during your call with  and .

Answering a call

Before using the speaker to answer an incoming call, make sure that the speaker is connected to your mobile phone or that your mobile phone has stored the pairing information of the speaker and these two devices are within effective distance (approximately 10 M or 33 ft.).


- When there is an incoming call, the ring tone is heard from both the speaker and your mobile phone. Press   to answer the phone.
- If "automatic answer" function is set on your mobile phone, the speaker will automatically answer the call without pressing   on the headset.
- If the speaker is off when there is an incoming call, a two- to five-second press of   will turn it on, and then press it for less than one second to answer the call.

Notes:



- Some brands of mobile phones don't ring, instead, the speaker rings when there is an incoming call. Simply press   to answer the call.
- Some brands of mobile phones ring, but the speaker doesn't ring when there is an incoming call. Press   to answer the call when the mobile phone rings.



Ending a call

When using the speaker, you can end a call in any of these ways:

- Short press 
- Press the end call button on your mobile phone
- The call will end automatically when the party with whom you're talking ends the call

Mute

- In call mode, press and hold the  until you hear a tone. The microphone will be in mute mode, and the other party cannot hear you. While you have your phone muted, you may hear tones at regular intervals.
- In mute mode, press the  to return to normal mode.

Note: When using the headset alone, you may achieve this function by pressing the  and  on the headset at the same time.

Rejecting an incoming call


When using the speaker, you can reject a call in any of these ways:

- Long press 
- Press the end call button on your mobile phone

Call transfer


 
Transfer the call from the speaker to your mobile phone

During a call, you may switch from the speaker to your mobile phone in any of these ways:

- Press  for two to five seconds until you hear it beep twice
- Transfer the call using your mobile phone's functionality
- Turn the speaker off

Transfer the call from the speaker to your mobile phone

During a call, you may switch the call from the mobile phone back to the speaker

- Press  for two to five seconds until it beeps twice
- Transfer the call using your mobile phone's functionality
- If the speaker is turned off during a call, turn it on and short press  to transfer the call from the mobile phone to the speaker.

Note: These procedures will vary according to the functionality of the mobile phone you are using.





Switching from speaker to headset

If you need to switch from a speaker phone call to a more private headset call, simply grasp the headset, pull it out of the base unit and insert the earpiece into your ear. The call is automatically switched to the headset only. Sounds will no longer be emitted from the base unit. To return the call to speaker, remove the headset from your ear and replace it into the base unit.

Three-way calling

If your mobile phone and the mobile service you subscribe to support three-way calling, you can also use this function with the speaker.

Follow procedures below when one party is on the line with you and the other is attempting to call you:

- **To continue on the active call and answer the waiting call:** short press .
- **To hang up the active call and answer the waiting call:** press  for two to five seconds until it beeps twice.
- **To start the three-way call function:** press  for two to five seconds until it beeps twice.
- **To end the three-way call function:** press  for two to five seconds during three-way call.

Important information

Maintenance

- Keep this product in a dry place, and clean it periodically with a soft cloth.
- Do not store in a dusty place, nor in very high nor low temperatures.
- Do not disassemble this product, as this may damage it.
- Avoid rough treatment such as dropping, knocking, or shaking this product.
- Be sure to plug the adapter only into an appropriate electrical outlet to avoid damaging the battery.

Battery

- When using the Wireless Portable Speaker with Headset for the first time, make sure the battery has been fully charged for at least 3 hours.
- Battery maintenance: The battery can only be replaced by a professional. If this product will not be used for a long time, make sure to charge it at least once every two months.

Caution: Do NOT dispose of batteries in fire because there is a danger of explosion.

Power Supply

- An alternative power adapter can only connect with a compatible power source.
- Hold the adapter, not the cable, when you remove the adapter from power socket.
- Do NOT directly spray liquid or cleansers on the surface of your the Wireless Portable Speaker with Headset. Spray the cleanser on the soft cloth, and then clean the device with it. Disconnect the charger and turn off the device when you clean it.

Cars with air bags

Caution: Do NOT place the Wireless Portable Speaker with Headset on top of an air bag or within the area an air bag can reach when it is deployed. If you place the Wireless Portable Speaker with Headset within an air bag's deployment range, it may be ejected and may result in serious harm to the driver or passengers.

Frequently Asked Questions

1. Can the Wireless Portable Speaker with Headset be used for all brands of mobile phones?
 - Yes, as long as the mobile phone has built-in Bluetooth Voice Gateway functionality.
2. How far is the effective distance between the Wireless Portable Speaker with Headset and a Bluetooth wireless technology enabled mobile phone?
 - The effective distance (with no barriers) is 10 meters (33 feet, Class II).
3. Can another wireless mobile phone user hear my conversation?
 - No. Through pairing, you have created a secure link between your mobile phone and your GCK800.
4. Why does the red light turn on and flash?
 - The battery of your Wireless Portable Speaker with Headset is running low and needs to be recharged.
5. Why is my mobile phone unable to find the Wireless Portable Speaker with Headset?
 - Your mobile phone should be able to find the Wireless Portable Speaker with Headset when it is in pairing mode. Refer to “Pairing” on page 5 for details.
6. Is pairing needed each time when I use the Wireless Portable Speaker with Headset?
 - No. The pairing information is stored in both devices even if one or both of them have been turned off.

7. Is it necessary to reconnect the two devices when there is an interruption on the link between my mobile phone and the Wireless Portable Speaker with Headset?
 - It varies according different brands of mobile phones. Some mobile phones can be reconnected automatically if both devices are within the effective distance. Some mobile phones must be reconnected.
8. Why is there noise in my Wireless Portable Speaker with Headset?
 - When the distance between your mobile phone and the Wireless Portable Speaker with Headset exceeds the effective distance, background noise will occur accordingly.
 - If the signal for your mobile phone is poor in your area, the Wireless Portable Speaker with Headset will also receive poor quality reception.
9. What should I do if the Wireless Portable Speaker with Headset's sound quality is poor?
 - Try adjusting the volume of your mobile phone or Wireless Portable Speaker with Headset. Also, check the quality of the signal on your mobile phone in your area.

Other instructions

Different Bluetooth wireless technology enabled mobile phones may have been designed in different ways, thus may function differently. The instructions provided in this user guide may not cover all information. For further information please refer to your mobile phone user guide.

CONSUMER LIMITED WARRANTY

Kyocera Wireless Corp. (“KYOCERA”) offers you a limited warranty that the enclosed product or products (the “Product”) will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States and Canada.

KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period (“Proof of Purchase”). After the one year warranty period, you must pay all shipping, parts and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KYOCERA), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center.

USE ONLY KYOCERA APPROVED ACCESSORIES WITH KYOCERA PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT. REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS". KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada: 1-800-349-4478 or 858-882-1401; or contact KYOCERA at the following address: 10300 Campus Point Drive, San Diego, California, 92121-1582, USA, Attention: Technical Support.

DO NOT RETURN YOUR PRODUCTS TO THE ABOVE ADDRESS. Please call or write for the location of the Kyocera Wireless Corp. authorized service center nearest you and for procedures for obtaining warranty service.