

user guide



Wireless Stereo Headset with Pendant Controller

FCC Notice:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and users' authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

To comply with the FCC RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada Notice

Operation is subject to the following two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications of the RSS210.

Kyocera is a registered trademark of Kyocera Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Kyocera Wireless Corp. is under license. All other marks are held by their respective owners. Copyright © 2007 Kyocera Wireless Corp. All rights reserved.

CONTENTS

| | |
|--|---|
| Wireless Stereo Headset with Pendant Controller | 1 |
| Using the toggle key. | 1 |
| Getting started | 2 |
| Powering the headset on and off | 2 |
| Pairing the headset to your mobile phone. | 2 |
| Playing music | 3 |
| Making calls | 4 |
| Receiving calls. | 4 |
| Rejecting calls. | 4 |
| Call transfer | 4 |
| Ending a call. | 4 |
| Safety Information | 4 |
| Notes | 5 |

Wireless Stereo Headset with Pendant Controller

Your new stereo audio quality Wireless Stereo Headset with Pendant Controller provides hours of comfortable music listening or for making mobile phone calls.


Noise reducing software technology lets you enjoy outstanding voice call quality. The Wireless Stereo Headset with Pendant Controller can be used in noisy environments and still deliver sharp voice quality and receive the best, clearest audio clarity.

Bluetooth Wireless Technology

Bluetooth wireless technology is a short-distance wireless communication technology. The range of operation between Bluetooth wireless technology enabled devices is about 10 meters (33 ft.).

Bluetooth wireless technology enabled devices do not require line of sight and can transmit through walls and other non-metal obstacles. Thick or reinforced concrete can limit the range.

1. Ear jack connector
2. Navigation points (toggle **up +**, **down -**, **right >>** or **left <<**)
3. Hold switch
4. USB charging jack
5. Microphone
6. Toggle key
7. LED

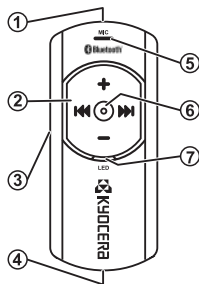

Using the toggle key

The toggle key controls the following functions:

| To do this... | Do this with  the toggle key... |
|-----------------------------------|--|
| Power on and off | Press IN for approximately 1.5 seconds. |
| Volume control | Press up + or down - . |
| Music play | Press IN briefly. Press IN briefly again to resume. |
| Pairing | Press up + or down - for 4 to 5 seconds. |
| Receiving a call | When the phone rings, press IN briefly. |
| Initiating a voice-activated call | Press right >> or left << for approximately 1.5 seconds and follow the voice prompts. |
| Redialing | Press right >> or left << twice briefly. |
| Call Switching | Press IN for approximately one and a half seconds. |
| End a call | While in a call press IN |
| Reject a call | Press and hold IN |

Getting started

Remove all components from the package:

1. Wireless Stereo Headset with Pendant Controller
2. USB connector for charging
3. Lanyard w/earbuds
4. User Guide

Charging the headset

This headset is equipped with the latest Li-Polymer battery which can be charged at any time without degrading the battery life, regardless of the amount of charge remaining.

The battery must be fully charged before initial use. It takes approximately 1 hour to charge the battery when fully discharged; less time if it has a partial charge.

A single charge will provide approximately 200 hours of stand-by time. You can call or listen to music continuously for up to five hours.

1. Ensure the headset is turned off.
2. Connect the pendant to your computer's USB port using the provided USB adapter.
Note: If using a charger other than the one provided with your device, ensure that it is approved for use with this product.
3. While the pendant is charging the red LED is lit.
4. When the device is fully charged the red LED blinks and then turns off.

Important: The rechargeable battery in the headset must be disposed or recycled according to local ordinance regulations.

Checking the battery level

- With the headset turned on, press the toggle key **Ⓞ down** - for approximately one and a half seconds. The LED blinks in the following patterns (the more blinks, the fuller the battery):
 - 5 consecutive blinks: fully charged/over 4.0V
 - 4 consecutive blinks: 3.8V
 - 3 consecutive blinks: 3.6V
 - 2 consecutive blinks: 3.4V
 - 1 blink: nearly dead/under 3.4V

Powering the headset on and off

Power on

- Press the toggle key **Ⓞ IN** for approximately one and a half seconds. The LED lights up, and if the earpiece is in place, you can hear the tones of the scale play from low to high.

Power off

- Press the toggle key **Ⓞ IN** for four to five seconds to power the pendant off. If the earpiece is in place, you can hear the tones of the scale play from high to low, and the LED turns off.

Pairing the headset to your mobile phone

Before you can use the headset to make calls, you must pair the headset with your phone. Pairing creates a secure link between your phone and the unique ID of the headset. You only have to pair devices once.

When the device is initially powered on, it is automatically in pairing mode. The LED blinks rapidly for approximately eight seconds and then stops. The LED will then continue blinking at five second intervals.


If you did not pair the headset with your mobile phone when you initially turned it on, you can do so at any time.

1. After power-on, press the toggle key **⏻ up +** or **⏿ down -** for four to five seconds

Note: The blue LED will blink rapidly indicating that it is in pairing stand-by status.

2. Prepare your mobile phone for pairing according to the instructions provided with the phone.
3. Begin pairing the headset and the phone according to the instructions provided with the phone.
4. Select **ED-8800**.

Note: The password is **0000**.

5. Once the devices have been successfully paired, the blue LED starts to blink twice at five-second intervals. When the Bluetooth icon  displays on the mobile phone LCD, the registration is complete.

Note: If the LED blinks rapidly for several seconds, the pairing was unsuccessful. In this case, power off both the phone and the headset and begin the pairing process again.

6. The connection between the headset and phone terminates when the distance exceeds 10M (33 ft.).

If this happens, press the toggle key **⏻** to the **right >>|** or **left |<<**, and the connection will be recovered. The stereo profile is connected if you press the toggle key **⏻ IN** or will automatically reconnect after about four minutes.

Playing music

Make sure you are within 10M (33 ft.) of the music player. (This distance may vary depending the other device's specifications.)

Note: Ensure that the headset is paired with the mobile phone.

Adjusting the volume


- While listening to music or making a call, press the toggle key **⏻ up +** or **⏿ down -**.

Controls

- Press the toggle key **⏻ IN** to start the MP3 player. Press **⏻ IN** again to stop the music.
- While music is playing, a toggle **⏻** to the or **left |<<** returns to the beginning of the current song.
- Toggle **⏻** to the **right >>|** to jump to the next music selection.
- Press and hold the toggle key **⏻ IN** to stop the music.


Making calls

Direct dial from phone

1. Dial the number on your mobile phone.
2. Touch toggle key  slightly to the **right >>|** or **left |<<**.

Note: If your mobile phone supports auto-transfer and is set to do so, the call transfers to the headset automatically.


Redial

- Press the toggle key  briefly twice towards the **right >>|** or **left |<<** to redial the last number.


Note: This only functions if you are not in music play mode.

Voice activated call

Note: The phone must support hands-free and voice recognition functions and voice dial must already be set up for this number.

1. Press the toggle key  **right >>|** or **left |<<** for approximately one and half seconds.
2. When the mobile phone tells you to speak the name, you will hear a beep at which time you should say the name.

Receiving calls

- When you receive the call, press the toggle key  briefly to the **right >>|** or **left |<<** to answer.

Rejecting calls

- Press and hold the toggle key  **IN**.


Note: This function may not be supported on all devices.

Call transfer

Using the mobile phone


To transfer a call from the mobile phone to the headset, press the transfer key on the mobile phone according to the device's instructions. Repeat this process to transfer the call back to the mobile phone.

Using the headset pendant

To transfer a call from mobile phone to the headset, press and hold the toggle key **IN**  for approximately one and a half seconds. Repeat this process to transfer the call back to the mobile phone.

Note: The call may be dropped if the transfer process is mishandled.

Ending a call

To hang up the phone, press the toggle key  **IN**. If the other party hangs up before you do, the call is automatically ended.

Safety Information


- Please do not connect the plug of the headset charger with wet hands.
- Please do not let children or pets bite or suck on the headset.
- Please ensure the headset is powered off when entering construction or other areas that may be susceptible to explosions.
- Please do not use the headset while driving your car.

- To protect your hearing, and prevent hearing loss, ensure volume is kept within reasonable levels.

Notes

Some features or functions may not be supported by your mobile phone. Please check with your service provider for specific feature information.

To ensure correct operation, please read the following safety information carefully.

- Take care not to drop the headset. This may shorten product life and void the warranty.
- Do not disassemble the headset. This will void the product support agreement.
- If the headset has not been used for several hours, charge it completely before its next use. This will help ensure proper operation.
- Take care not to press the toggle key  by mistake. This may activate the redial function, and initiate a call.
- To prevent possible disruptions or noise, please do not use the headset near a microwave.
- While charging the headset, please ensure the power is off, and use the charger included with the kit. Using an incorrect charger may result in product failure.
- Please do not leave your headset in high temperature settings, such as a sauna or in the car during the summer.

CONSUMER LIMITED WARRANTY

Kyocera Wireless Corp. ("KYOCERA") offers you a limited warranty that the enclosed product or products (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States and Canada.

KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period ("Proof of Purchase"). After the one year warranty period, you must pay all shipping, parts and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KYOCERA), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center.

USE ONLY KYOCERA APPROVED ACCESSORIES WITH KYOCERA PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS". KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada:

1-800-349-4478 or 858-882-1401; or contact KYOCERA at the following address:
10300 Campus Point Drive, San Diego, California, 92121-1582, USA, Attention: Technical Support.

DO NOT RETURN YOUR PRODUCTS TO THE ABOVE ADDRESS. Please call or write for the location of the Kyocera Wireless Corp. authorized service center nearest you and for procedures for obtaining warranty service.